


**Installation Precautions:**


1. Please read the instructions carefully before installation;
2. This lamp is used in the W2 three-phase track system or on the compatible track of other company brands, and the guide rail parameters are:  
Input voltage: AC 220-240V Maximum current: 16A Maximum load: 3680W;
3. Installation by qualified electricians;
4. In order to avoid the danger of electric shock, please confirm to turn off the power before installing and maintaining the lamp;
5. Only suitable for indoor installation (not for humid environment);
6. The light source of this lamp is not replaceable, once it needs to be replaced (such as the end of the life of the light source), the entire lamp should be replaced;
7. Keep this manual properly for use when needed.

**Installation of Track Adapter:**


1. Before assembly, ensure that the "conductive switch" is parallel to the adapter, and display the "1" or "2" or "3" status in the ring of the commutator knob as required.

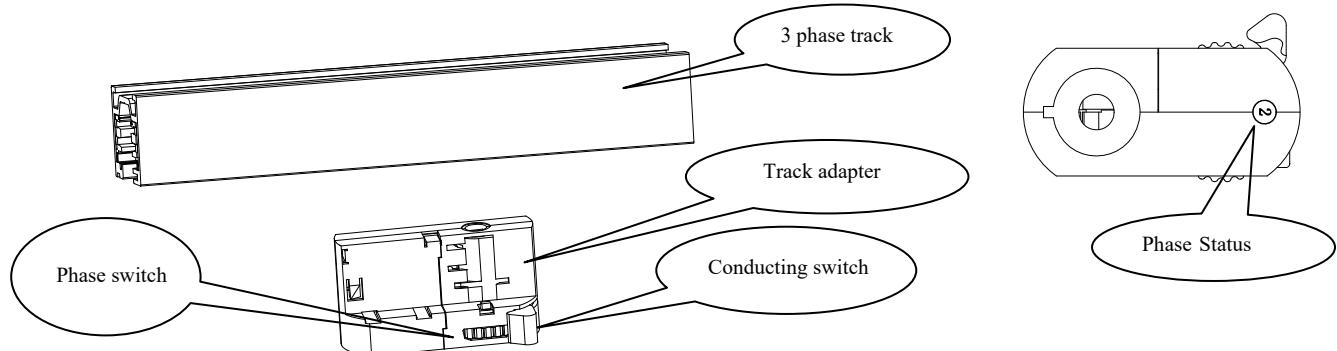

2. Align the boss of the adapter with the groove of the guide rail before assembly.

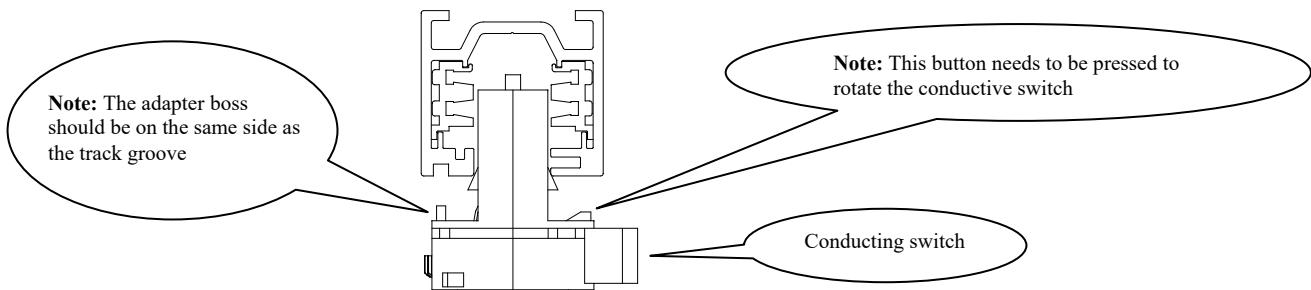


3. After the assembly is completed, turn the "conductive switch" 90 degrees clockwise for conduction.

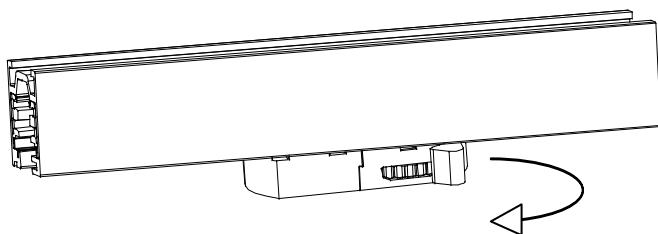

**Note:** Removing the adapter is the opposite procedure.


**Light Adjustable:**

The lamp can rotate 355 degrees horizontally and 90 degrees vertically, as shown in the figure below.

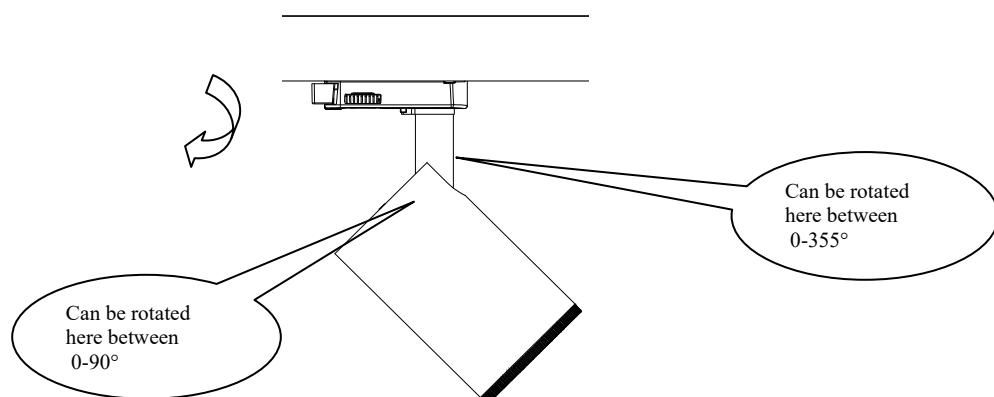


**Dimmable:**

According to the figure, turn the dimming knob clockwise by hand to perform 10%-100% dimming.

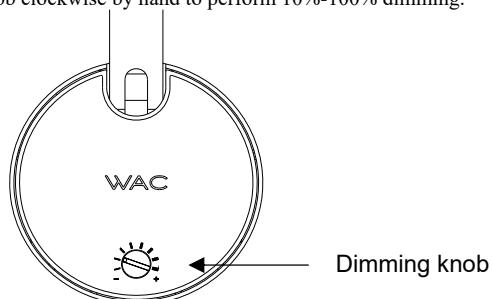


**Installation of accessories:**


1. Turn the front cover clockwise until it stops moving, and remove the front cover from the lamp by hand.
2. After the lens or other accessories are replaced, the opening on the side of the front cover is aligned with the convex point on the lamp body, and the front cover is tightened counterclockwise to complete the installation of the accessories.

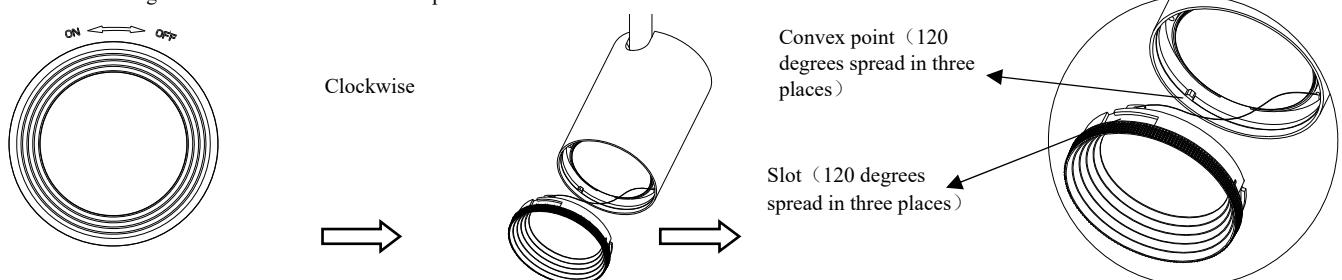

1. For glass accessories, please refer to the specification book and the instructions for removing and replacing the new glass:

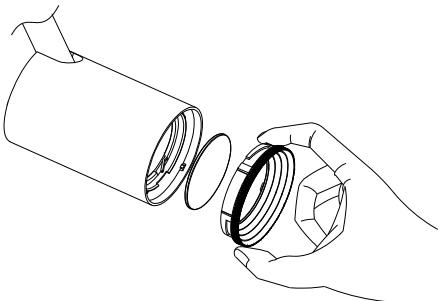


As shown in the figure above, the front cover will be rotated clockwise by hand. When it is not moved, the front cover will be removed from the lamp by hand, and the new lens can be put into the lamp by taking out the lens accessories.

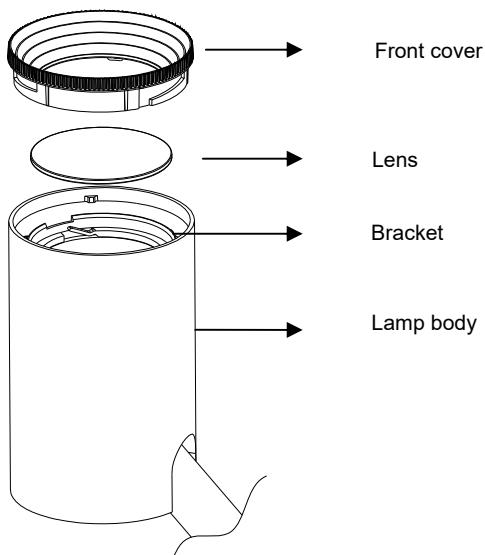


2. Please refer to the specifications for cellular accessories, and the instructions for dismantling the honeycomb:

- Take out the front cover and hang it on the lamp, and install the honeycomb into the fixed bracket, as shown in the following figure;
- Insert the front cover into the lamp body and tighten it counterclockwise as shown below.

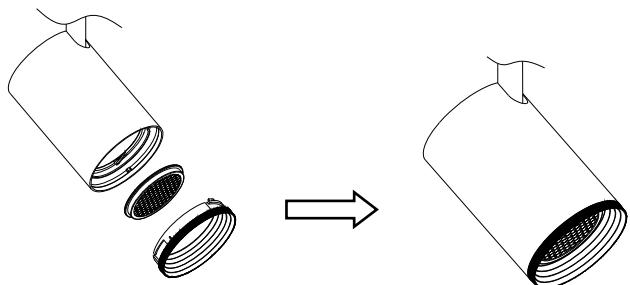

3. Snoot accessories please refer to the specification, disassembling snoot instructions:

- Take out the front cover and put the honeycomb (or other accessories) into the fixed bracket, as shown below;
- Put the snoot into the lamp body and tighten it counter clockwise.

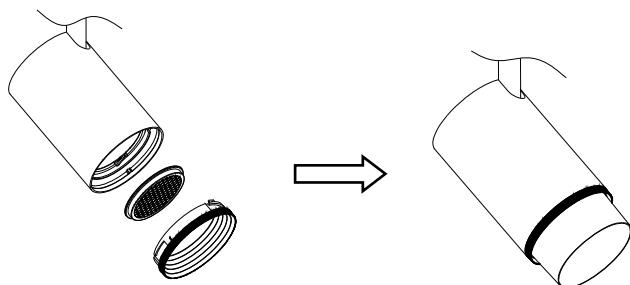

**Note:** When replacing the parts, the snoot and the honeycomb can be installed at the same time.

### Loading:

- The maximum weight that the track system can bear is shown in the figure below, which includes the weight of the entire suspension system.
- A single adapter can bear the maximum weight of 10kg (according to the normal installation position of the lamp, the weight is added to the adapter).

